

# SMART REMOTE


LONG-RANGE REMOTE CONTROL FOR YOUR GOPRO

---

USER GUIDE



## THE BASICS

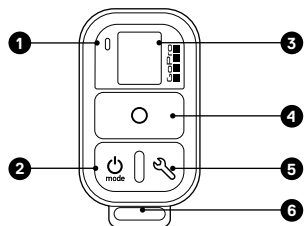


1. Status Light
2. Power/Mode Button
3. Remote Status Screen
4. Shutter/Select Button
5. Settings/Tag Button
6. Charging Port/Attachment Key Slot

## WEARING THE SMART REMOTE

 
### ATTACHING THE REMOTE TO THE STRAP

The attachment strap secures the remote to your wrist, backpack straps, ski poles, bike frames, and more.

1. Thread the strap through the slots on the back of the remote.



 
2. Position the remote along the strap as shown.




### ATTACHING THE REMOTE USING THE KEY + RING

The attachment key and ring secure the remote to your lanyards, straps, car keys, zippers, and more.

 
1. Slide and hold the latch lever in the direction of the arrow (A), then pull the key out of the remote (B).



2. Attach the ring to your lanyard, straps, etc.

 


3. Push the attachment key into the key slot until it clicks.

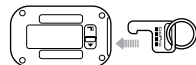


## CHARGING

 1. Slide and hold the latch lever in the direction of the arrow (A), then pull the key out of the remote (B).




2. Insert the charging cable into the remote until it clicks into place.

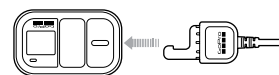

3. Connect the other end of the cable to a computer or other USB power source.


*Note: Be sure that the computer is connected to a power source. If the remote status screen does not indicate that the remote is charging, use a different USB port.*

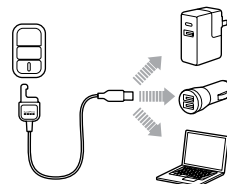


## POWERING ON + OFF


### POWERING ON

Press the **Power/Mode** button [  ].

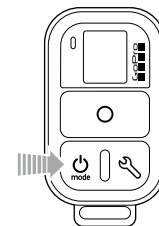

### POWERING OFF

Press and hold the **Power/Mode** button [  ] for two seconds.

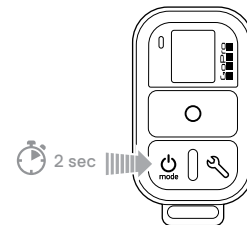


## PAIRING THE REMOTE AND YOUR GOPRO

You can pair the Smart Remote with any wireless-enabled GoPro. The remote can control up to 50 cameras\* at a time from up to 600ft (180m) away in optimal conditions. Your camera recognizes only one remote at a time. The Smart Remote is waterproof to 33ft (10m).


The distance from which you can control your camera with the remote varies and depends on factors such as camera model, terrain, weather, obstructions, and electromagnetic interference.

For information about using the Smart Remote with other GoPros, see [gopro.com/help](https://gopro.com/help).

\*Dependent on camera model and environmental conditions. Visit [gopro.com](https://gopro.com) for details.

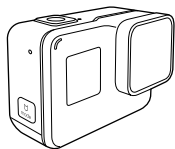



### PAIRING YOUR REMOTE AND YOUR HERO5 BLACK

1. Power off the remote.
2. On your camera, complete these steps:
  - a. From the main screen, swipe down.
  - b. Tap Connect > Connect New Device > Smart Remote. The camera automatically begins pairing.
3. Power on the remote. If the remote was never paired with a camera, it automatically begins pairing. Otherwise, press and hold the **Settings/Tag** button [  ] for four seconds to begin pairing. Once the devices are paired, a confirmation appears on each screen.



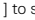


### PAIRING YOUR REMOTE AND YOUR HERO5 SESSION

1. Power off the camera and the remote.
2. On your camera, complete these steps:
  - a. Press the **Menu** button to display the status info.
  - b. Press the **Menu** button repeatedly to cycle to CONNECTION SETTINGS , and then press the Shutter button [  ] to select it.
  - c. Press the **Menu** button repeatedly to cycle to CONNECT NEW DEVICE, then press the Shutter button to select it.
  - d. Press the **Shutter** button repeatedly to cycle to GOPRO RC.
  - e. Press the **Menu** button to cycle to the check mark, and then press the Shutter button to select it.
3. Power on the remote. If the remote was never paired with a camera, it automatically begins pairing. Otherwise, press and hold the **Settings/Tag** button [  ] for four seconds to begin pairing. Once the devices are paired, a confirmation appears on each screen.

## PAIRING THE REMOTE AND YOUR GOPRO






### PAIRING YOUR REMOTE AND YOUR HERO SESSION

1. Ensure that your camera has never been paired with a smartphone/tablet or a GoPro remote.  
*Note: If your camera was already paired, follow the next procedure for pairing HERO Session instead.*
2. Power off the camera and the remote.
3. On your camera, complete these steps:
  - a. Press the **Info/Wireless** button to display the status info.
  - b. Press the **Info/Wireless** button repeatedly to cycle to RC , and then press the **Shutter/Select** button [  ] to select it. The camera automatically begins pairing.
4. Power on the remote. If the remote was never paired with a camera, it automatically begins pairing. Otherwise, press and hold the **Settings/Tag** button [  ] for four seconds to begin pairing. A checked box [  ] appears on both screens once the devices are paired.

### PAIRING YOUR HERO SESSION WITH AN ADDITIONAL REMOTE

1. Ensure that your camera has already been paired with a smartphone/tablet or a GoPro remote.  
*Note: If your camera was never paired, follow the previous procedure for HERO Session instead.*
2. Power off the camera and the remote.
3. On your camera, complete these steps:
  - a. Press the **Info/Wireless** button to display the status info.

- b. Press the **Info/Wireless** button repeatedly to cycle to ADD NEW, and then press the **Shutter/Select** button [  ] to select it.
  - c. Press the **Info/Wireless** button again to highlight RC, and then press the **Shutter/Select** button to select it. The camera automatically begins pairing.
4. Power on the remote. If the remote was never paired with a camera, it automatically begins pairing. Otherwise, press and hold the **Settings/Tag** button [  ] for four seconds to begin pairing. A checked box [  ] appears on both screens once the devices are paired.

## CONNECTING THE REMOTE AND YOUR GOPRO


---

After your remote and camera are paired, follow the steps below to connect them in the future. With this procedure, your camera connects to the remote that it connected to most recently.


### CONNECTING THE REMOTE AND YOUR HERO5 BLACK

1. Power on the remote and the camera.
2. On your camera, complete these steps:
  - a. From the main screen, swipe down.
  - b. Tap Connect > Wireless Connections to turn on wireless.

### CONNECTING THE REMOTE AND YOUR HERO5 SESSION

1. Power on the remote.
2. On your camera, complete these steps:
  - a. Press the **Menu** button to display the status info.
  - b. Press the **Menu** button repeatedly to cycle to CONNECTION SETTINGS, and then press the **Shutter** button [  ] to select it.
  - c. If *TURN ON CONNECTION* appears, press the **Shutter** button to select it. Otherwise, the devices are already connected.

### CONNECTING THE REMOTE AND YOUR HERO SESSION



1. Power on the remote.
2. On your camera, complete these steps:
  - a. Press the **Info/Wireless** button to display the status info.
  - b. Press the **Info/Wireless** button repeatedly to cycle to RC, and then press the **Shutter/Select** button [  ] to select it.

## CAPTURING VIDEO AND PHOTOS

---


Use the remote to capture video and photos with one camera or multiple cameras.

### TO CAPTURE VIDEO OR PHOTOS:

1. Press the **Power/Mode** button [  ] repeatedly to cycle to the mode that you want.
2. Press the **Shutter/Select** [  ] button to begin capturing.
3. To stop capturing video or time lapse content, press the **Shutter/Select** button again.

If your camera goes out of range of the remote while you are recording, recording continues until you stop it.

*Note: If your HERO Session camera goes out of range while in Burst or Photo mode, the camera status screen remains on. If the camera is still out of range after five minutes, the camera automatically powers off.*

**PRO TIP:** You can add HiLight Tags to quickly find highlights during playback and editing. While recording, press the **Settings/Tag** [  ] button on the remote to add a HiLight Tag. If the remote is connected to multiple cameras, HiLight Tags are added to video on all cameras.\*

*\* HiLight Tags are not available on all GoPro camera models.*

THE FOLLOWING FEATURES ARE NOT AVAILABLE WHEN USING THE REMOTE WITH YOUR GOPRO:

- QuikCapture
- Continuous photo with multiple cameras
- Manually capturing photos while recording video with multiple cameras

## REGULATORY INFORMATION

---

To see additional information regarding country certifications, refer to the Important Product + Safety Instructions included with your remote.

